


FC3, Application with Switched Ground for Primary Pump

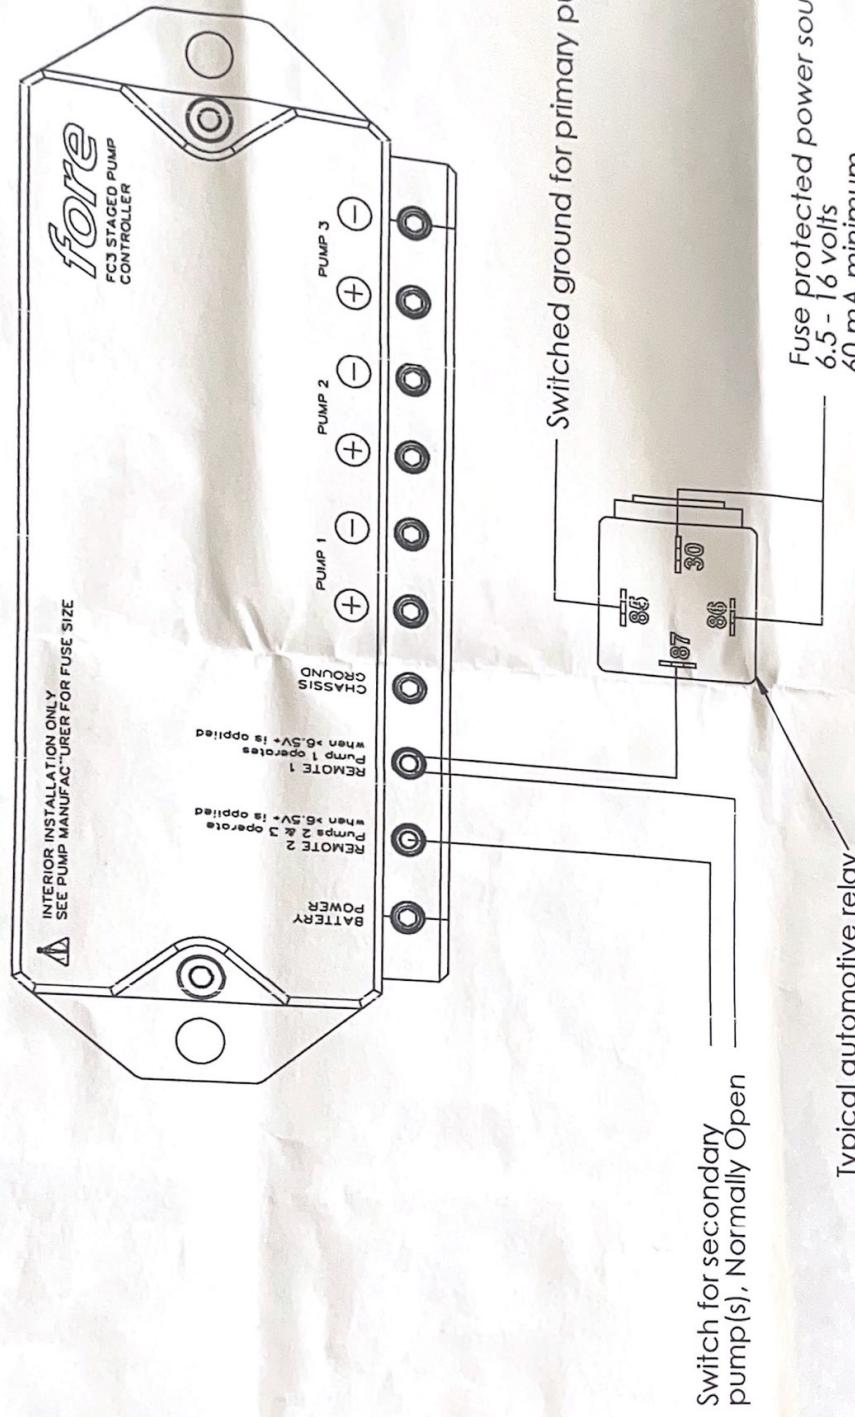

WARNING

In this configuration, if the "switched ground" wire is compromised and makes contact with chassis ground, the primary pump will operate